

BLACKWELL

Thank you for purchasing this BLACKWELL watch. The following instructions are provided to help you familiarize yourself with the proper operation and care of your BLACKWELL watch. To ensure correct use, please read and follow the instructions carefully.

CONTENT

AUTOMATIC


NH70	Selestial	P.03
9030	Van Alen	P.05
9132	Color Touch	P.08
STP1-11	Hamptons	P.12

QUARTZ

VD31	Grandeur, Guggen & Hudson	P.15
2035	The MET	P.20


PRECAUTIONS AND PREVENTIVE MEASURES	P.21
-------------------------------------	------

SETTING THE TIME (NH70)

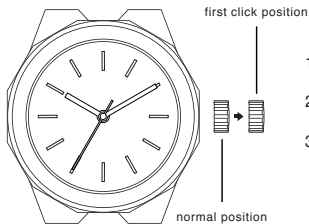

1. Unscrew the crown and pull the crown to the first click.
2. Turn the crown to set the hour and minute hands.
3. Push the crown back to the normal position and screw in the crown.

TO WIND UP THE WATCH (NH70)

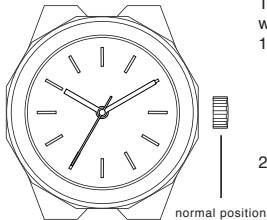

There are two methods to wind up the watch:

1. Manual winding. (Rotate the unscrewed crown clockwise at normal position.)


The movement is fully wound up by turning the crown a minimum 15-20 times. It will start to move naturally after shaking slightly.

2. To wind up with a winding machine.

Full wind up conditions:(Reference information)


- Rotary speed: 30 rPM
- Operating time: 60 minutes

DISPLAYS (9039)

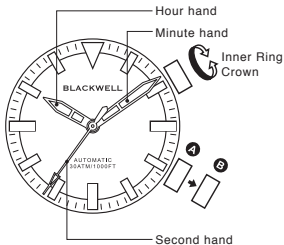


- A** Crown [A] position
(Normal position)
- B** Crown [B] position

SETTING THE TIME (9039)

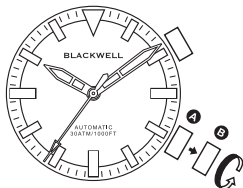


1. Gently unscrew the crown and pull it out to the [B] position.
2. Turn the crown to set hour and minute hands.
3. Push the crown back into the [A] position.

WIND UP THE MAINSPRING (9039)

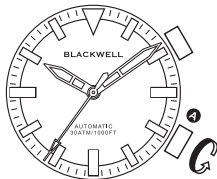


1. Manual winding. Gently unscrew the crown. Rotate the crown clockwise at the [A] position.
2. Wind 15~20 times clockwise until second hand starts to move naturally.

DISPLAYS (9132)

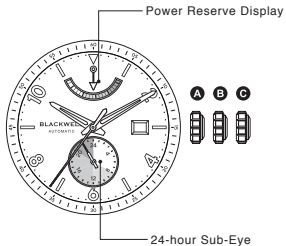


- A** Crown [A] position
(Normal position)
- B** Crown [B] position
- C** Crown [C] position

SETTING THE TIME (9132)

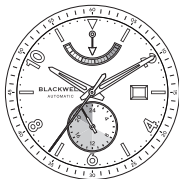


1. Gently unscrew the crown and pull it out to the [C] position.
2. Turn the crown to set hour and minute hands.
3. Push the crown back into the [A] position.

SETTING THE DATE (9132)

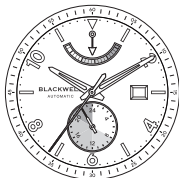


1. Gently unscrew the crown and pull it out to the [B] position.
2. Turn the crown clockwise to set the date.
3. Push the crown back into the [A] position.

WIND UP THE MAINSPRING (9132)

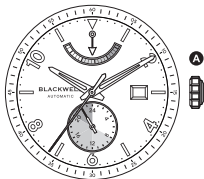



1. Manual winding. Gently unscrew the crown. Rotate the crown clockwise at the [A] position.
2. Wind 15~20 times clockwise until second hand starts to move naturally.

DISPLAYS (STP1-11)

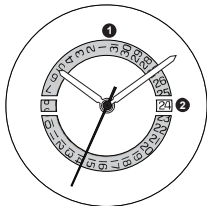



- ① Frosted display
- ② Date window

 SETTING THE TIME (STP1-11)

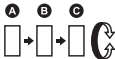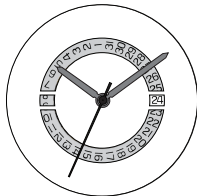


1. Pull the crown out to the [C] position.
2. Turn the crown until the hour and minute hands are set.
3. Push crown back to the [A] position.

 SETTING THE DATE (STP1-11)

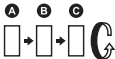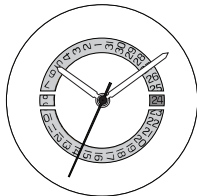


1. Pull the crown out to the [B] position.
 2. Turn crown until yesterday's date appears.
 3. Pull the crown out to the [C] position.
 4. Turn the crown to set the correct date.
 5. Push crown back to the [A] position.
- ★ Do not set the date between 10:00 PM and 2:00 AM as this may cause a malfunction.

DISPLAYS (VD31)

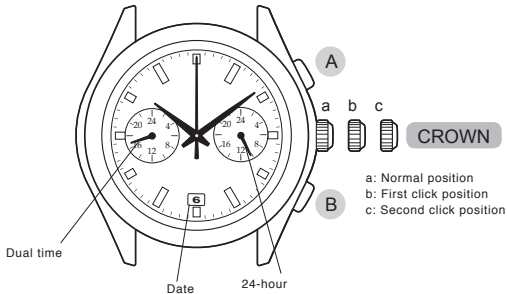

SETTING THE TIME (VD31)

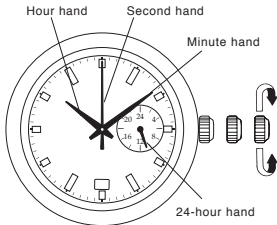


CROWN

1. Pull the crown to the second click when the second hand is at the 12 o'clock position.
2. Turn to set the hour and minute hands.
3. Push the crown back into the normal position in accordance with a time signal.

- The 24-hour hand moves correspondingly with the hour hand.
- The moment the date changes it is midnight. When setting the hour hand, make sure that AM/PM is correctly set by using the 24-hour hand as an AM/PM indicator.

SETTING THE DATE (VD31)

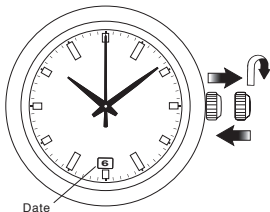


CROWN

1. Pull the crown out to the first click.
2. Turn clockwise until the desired date appears.
3. Push the crown back into the normal position.

- It is necessary to adjust the date on the first day after a 30-day month and February.
- Do not set the date between 9:00 PM. and 1:00 AM., as the date may not change properly. If it is necessary to set the date during that period of time, first change the time to any time outside of this period, set the date, and then reset to the correct time.

DUAL TIME FUNCTION (VD31)

While staying in a different time zone from where you usually use this watch, you can set the dual time hour hand to indicate the local time of where you are staying.

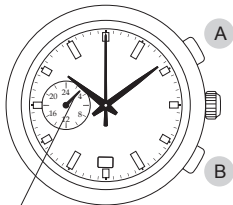

Dual time hour hand

Quick setting of the dual time hour hand:

CROWN Keep at the normal position.



A

or

B


Press to set the dual time hour hand to indicate the local time of the place where you are staying.

Each time the button A is pressed, the dual time hour hand turns counter-clockwise in one-hour increments.

Each time the button B is pressed, the dual time hour hand turns clockwise one-hour increments.

SETTING THE DUAL TIME (VD31)

Precise adjustment of the dual time hour hand

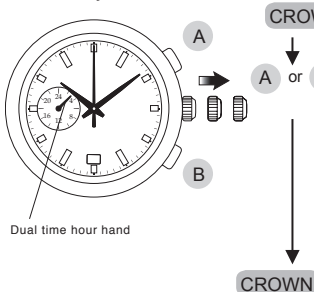

CROWN

Pull the crown to the second position when the second hand is at the 12 o'clock position. Press to set the dual time hour hand to indicate the local time of where you are staying.

Each time the button A is pressed, the dual time hour hand turns counter-clockwise in 10-minute increments.


Each time the button B is pressed, the dual time hour hand turns clockwise in 10-minute increments.

The hand moves quickly if the button is kept pressed.

CROWN

Push the crown back into the normal position in accordance with a time signal.

SETTING THE TIME (2035)

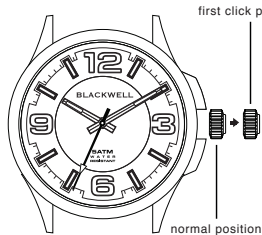

1. Pull the crown to the first click.
2. Turn the crown to set the hour and minute hands to set the time.
3. Push the crown back to the normal position.

PRECAUTIONS AND PREVENTIVE MEASURES

Temperature

Do not expose your watch to sudden temperature changes (exposure to sunlight followed by immersion in cold water) or extreme temperatures [over 60°C (140°F) or below 0°C (32°F)].

Magnetic Fields

Do not expose your watch to intense magnetic fields such as loudspeakers, portable telephones, computers or refrigerators and other electromagnetic appliances.

Shocks

Avoid thermal or other shocks as it may harm your watch. In the event of a violent shock, please contact BLACKWELL.

Harmful Products

Avoid direct contact with solvents, detergents, and perfumes, cosmetic products etc., since they may damage the bracelet, the case and/or the gaskets.

Care and Checks

Clean the case and bracelet regularly using a soft cloth to prevent any corrosion caused by perspiration. To clean all water-resistant watches use a toothbrush and soapy water, and then dry with a soft cloth. After being worn in the sea, the watch must be rinsed with warm fresh water and then dried thoroughly.

Water Resistance

1. **[5atm / 50m / 165ft]**
 Watches water resistant from 50 meters / 165 feet.
2. **[10atm / 100m / 330ft]**
 Watches water resistant from 100 meters / 330 feet.
3. **[20atm / 200m / 660ft]**
 Watches water resistant from 200 meters / 660 feet.

According to the water resistance 1-3 listed above, watches are protected against:

- | | |
|--------------|----------------------------|
| 1-2-3 | Water splashes / Rain |
| 1-2-3 | Surface swimming |
| 1-2-3 | Shower |
| 2-3 | Water sports |
| 3 | Skin diving / Scuba Diving |

Water Resistance

Water resistance of watches is rated based on laboratory pressure tests comparable to a swimmer or diver sitting still at that pressure level. However, many water-based activities involve a lot of movement and other environmental changes. These exceptions to how the watch was rated may challenge or defeat the water protection features of a water-resistant watch. The water-resistance of a watch cannot be permanently guaranteed. It may be affected by the aging of gaskets or by an accidental shock to the crown. We recommend that you have the water resistance of your watch checked once a year by BLACKWELL.

Never activate the time-setting crown and the pushers while the watch is underwater and make sure that the crown is pushed/screwed down tightly after every operation. Do not under any circumstances open the watch yourself.

Limited Warranty

Your BLACKWELL watch is warrantied by BLACKWELL and THE MONTRICHARD GROUP for a period of Twenty-Four (24) Months from the date of purchase under the terms and conditions of this warranty. The international BLACKWELL warranty covers material and manufacturing defects. If your BLACKWELL watch is beyond repair, BLACKWELL and The MONTRICHARD GROUP guarantees its replacement with a BLACKWELL watch of identical or similar characteristics. The warranty for the replacement watch is Twenty-Four (24) Months after the date the replacement is issued.

This manufacturer's warranty does not cover:

1. Wear and tear and aging (e.g., scratched crystal; alteration of the color and material of non-metallic straps and chains, such as leather, textile, rubber; peeling of the plating).
2. Any damage on any part of the watch resulting from abnormal/abusive use, lack of care, negligence, accidents (knocks, dents, crushing, broken crystal, etc.)
3. Incorrect use of the watch and non-observance of the instructions provided by BLACKWELL.
4. The BLACKWELL watch handled by non-authorized persons or which has been altered in its original condition beyond BLACKWELL'S control.

Limitation of Duration of Implied Warranties

All applicable implied warranties, including the implied warranty of merchantability and fitness for a particular purpose given to you by law are hereby limited in duration to the duration of this warranty. Under no circumstances will BLACKWELL or The MONTRICHARD GROUP be liable for any indirect or consequential damages of any kind.

BLACKWELL